 


"Smart Card" Washer Instructions

STEP 1 Set Fabric Selector and Wash Temperature:

Push Touch Pad for:

- * NORMAL / HOT
- * NORMAL / WARM
- * PERM PRESS / WARM
- * DELICATES / COLD

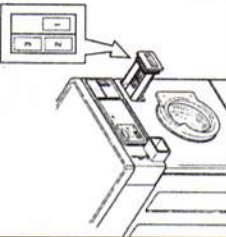

STEP 2 Add Laundry Supplies:


- Open Dispenser Drawer.
- Add 1/4 Cup Liquid (Best) or Powder Detergent into section #1.
- Bleach into section #2
- Softener into section #3

NOTICE - AVOID OVERSUDSING 1/4 CUP OF DETERGENT IS ENOUGH!

STEP 3 Load Laundry

Open washer Door and place laundry loosely into wash drum.

DO NOT OVERLOAD !

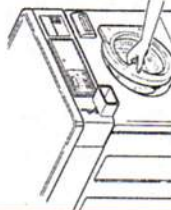


STEP 4 Close Loading Door

Close Loading Door tightly.
The washer will not operate with the loading door open.

STEP 5 Insert Card

Insert your Laundry Card into the Card Slot.

DO NOT USE COINS OR BILLS.

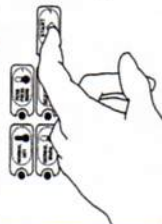

STEP 6 Start Washer

Push the **START** Button.
Remove your Card.

Lights will indicate WASH, RINSE, & SPIN CYCLES



WARNING !

The "DOOR LOCKED" light will be lit when the wash cycle starts.
DO NOT ATTEMPT TO OPEN THE DOOR AFTER THE WASH CYCLE BEGINS.

"Smart Card" Dryer Instructions

STEP 1 Clean Lint Filter

Clean Lint filter before each use

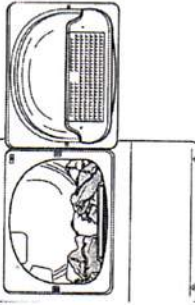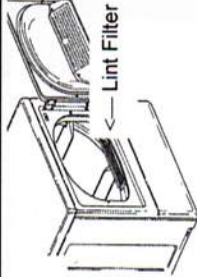

STEP 2 Load Laundry


Load clothes loosely into dryer Drum. Add fabric softener sheet if desired.

DO NOT OVERLOAD



STEP 3 Close Loading Door

Close loading Door. Dryer will Not Operate with the door open.

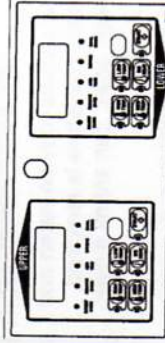


STEP 4 Determine Proper Dryer

The direction of the Arrow Indicates which dryer is being used.

STEP 5 Set Fabric Selector


Select:
HIGH TEMP, MED. TEMP
LOW TEMP, NO HEAT, by pushing touch pad.

NOTE: Always follow Clothing Care Label Instructions.

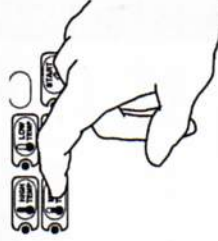

STEP 6 Insert Card

Insert your Laundry Card into the Card Slot.
DO NOT USE COINS OR BILLS.

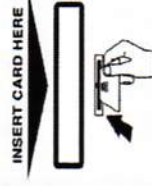

STEP 7 Start Dryer

Push the **START** Button.
Remove your Card.


To stop the dryer at any time—Open the door. To Restart— Close the door and push **START**

Adding value to your "Smart Card"

Two V.T.M. (Value Transfer Machines) are conveniently located in the hallway directly across from the business office.

- (1) **Insert your card** into the card slot. (upper Right)
- (2) **Insert \$5.00, \$10.00, or \$20.00 ONLY** into the Bill Slot. The \$ value will be automatically added to your card.
(Maximum amount that can be put on the card is \$50.00)

- (3) **Remove your card.** When you see the new, updated balance in the LED read out screen.

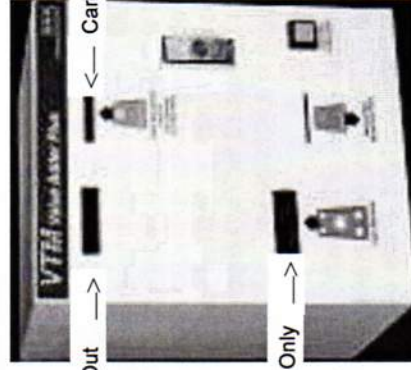

Read Out → Card Slot

\$5, \$10, \$20 Only →

To Purchase a Replacement or Extra "Smart Card":

1. Push the Green "Buy Card" Button
2. Insert 1 \$10.00 Bill or 2 \$5.00 Bills into the Bill Slot.
3. V.T.M. Will dispense Card.

NOTE: The New card will be dispensed with a pre-loaded value of \$6.00. To add additional value to the card — Follow instructions above.